

Monoline

Mid barrier Installation manual



Leverandør:

Vik:
6893 Vik i Sogn

 
Tlf: +47 57 69 86 50
Faks: +47 57 69 86 60
firmapost@vikorsta.no

Ørsta:
Skorgeura
6150 Ørsta

Tlf: +47 70 04 70 00
Faks: +47 70 04 70 04
firmapost@vikorsta.no

Index

1. Important	3
2. Description	3
3. Level of performance	3
4. Installing	3
4.1 Soil and placement	3
4.2 Installing the posts	3
4.3 Installing the profiles	4
4.4 After installation	4
5. Maintenance	4
5.1 Cleaning	4
6. Bolts and fasteners	4
7. Marking	5
8. Drawings	6



1. Important

Proper installation and repair is essential to ensure the systems maximum performance.

2. Description

The Monoline is a steel road restraint system that is designed to enhance safety on the roads.

The system has successfully been tested according to classes N2 described in EN 1317-2.

The system is based on steel tube posts with post distance of 2 and 4 meters and longitudinal steel C-profiles.

The system is designed to lead the vehicle back on the road when hit.

The bolts are an important part of the systems function and this manual should be read carefully before installation is started.

3. Level of performance

According to EN-1317

Post distance	Containment level	Working width [W]	Dynamic deflection	Impact severity level
2 m	N2	1,1m/W4	1,0 m	A
4 m	N2	1,7m/W5	1,6 m	A

4. Installing

4.1 Soil and placement

The soil where the barrier is placed should be of sufficient quality to ensure the guardrails function.

The posts should bend and not break up true the soil or be pulled up when the barrier is hit.

4.2 Installing the posts

The posts should be installed with a distance of 2 or 4 meters.

The holes for the posts should normally be pre-drilled or pre-rammed before installing the post. They should be drilled to the correct level or deeper, to ensure that there is no need to ram the posts after they are placed.

After alignment and height adjustment, parts of the hole around the post should be filled with gravel to lock the post in the correct position.

4.3 Installing the profiles

For details regarding connection between post to profile and profile to profile, see chapter 8. Drawings.

4.4 After installation

When the guardrail is installed and adjusted, the holes around the post should be fully refilled.

5. Maintenance

There are no general inspections intervals for this guardrail itself. Inspections intervals have to be determined based on local factors such as volume of traffic, risk of damage, climate etc.

The guard rail should be inspected regularly and if displaced or damaged, it should be adjusted and repaired.


All damaged profiles should be replaced with new when repaired.

5.1 Cleaning

Cleaning can be done with water and any type of Ph neutral detergent.

6. Bolts and fasteners

Art. nr.	Description	Amount
61607	Fastening bolt M10x25 mm (hot dip galvanized)	
	61607 Bolt M10x25	1
61609	Fastening bolt M10x130 mm (hot dip galvanized)	
	603310130 Bolt M10X130 4 kt.	1
	934310000 Nut M10	1
	933316045 Washer M10	1
60639	Connecting bolt M16x25 mm (hot dip galvanized)	
	61615 Bolt M16x25	1

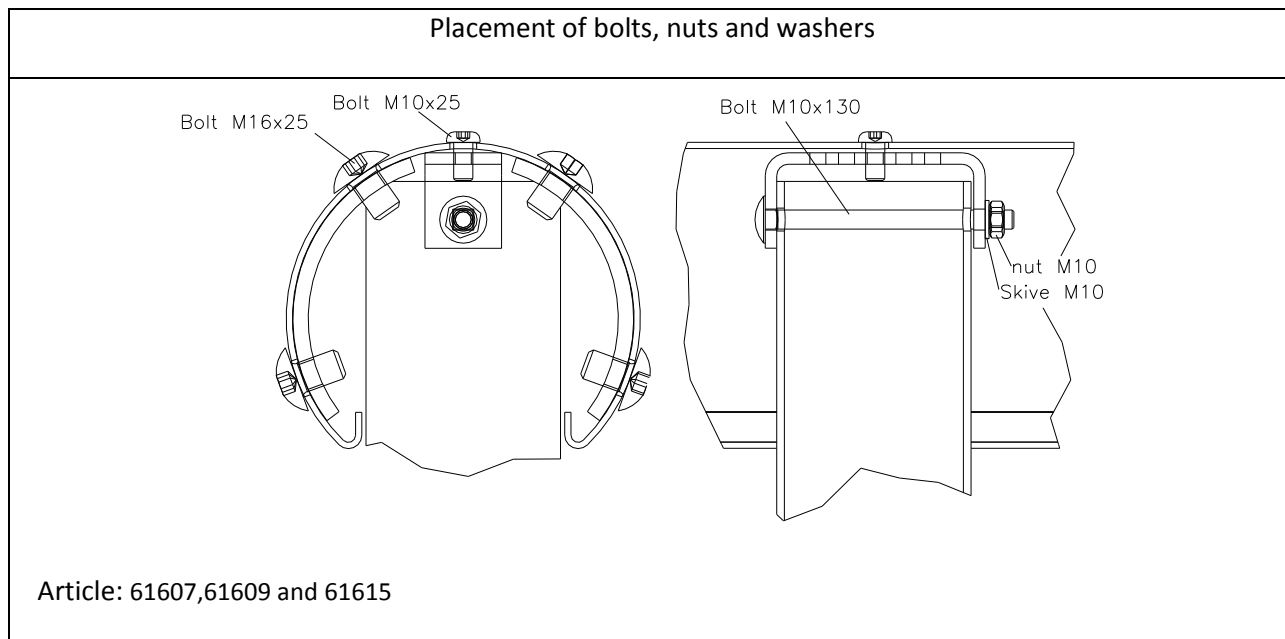

Note: Please check that all bolts/fasteners are placed correct and all bolts-washer-nuts-connections are normally/proper fastened/tighten.

7. Marking

If everything is done and installed according to this installation manual, the guardrail can be marked with the CE-mark. This mark shall be placed at the end (the starting end) of the installed guardrail.

8. Drawings

